


Indien een equipment is uitgebouwd uit een ACC functional location, deze weer inbouwen

IL02

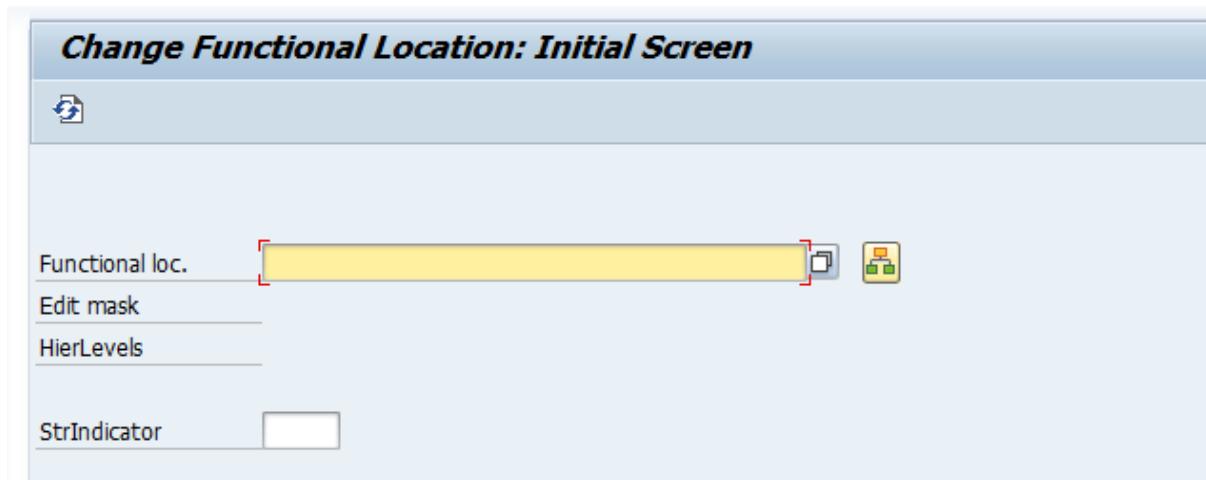

Change Functional Location: Initial Screen


Functional loc. [Empty field]

Edit mask

HierLevels

StrIndicator [Empty field]

Vul de functional location van de ACC in

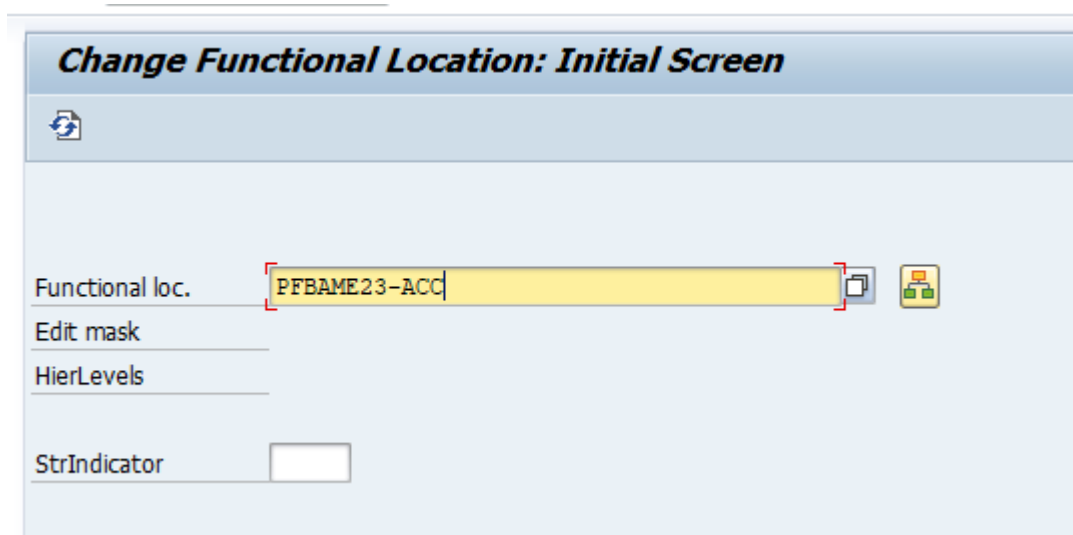

Change Functional Location: Initial Screen


Functional loc. [PFBAME23-ACC]

Edit mask

HierLevels

StrIndicator [Empty field]

Enter

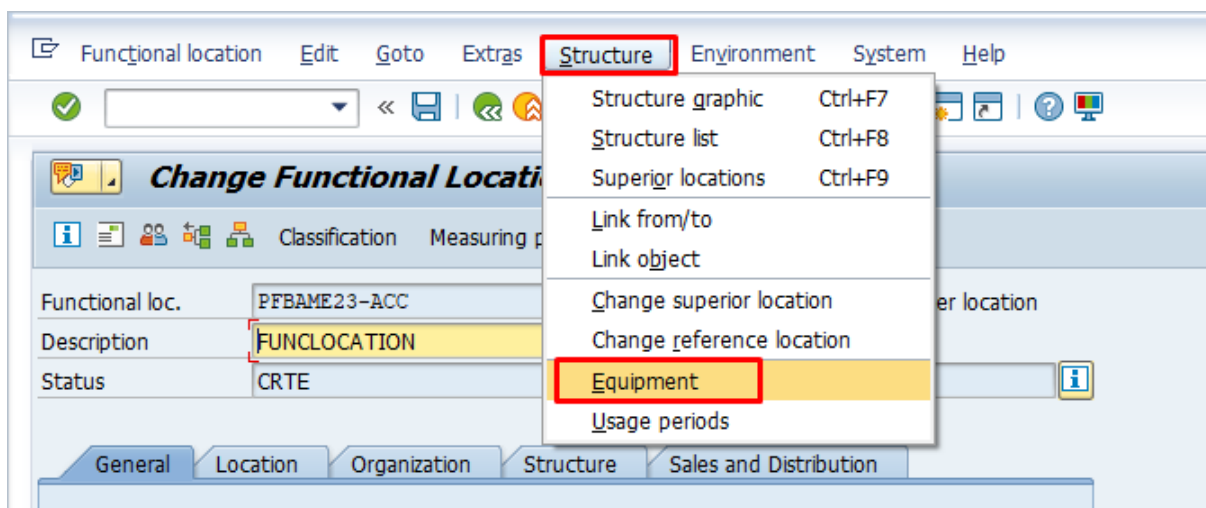

Functional location Edit Goto Extras **Structure** Environment System Help

Structure graphic Ctrl+F7
Structure list Ctrl+F8
Superior locations Ctrl+F9
Link from/to
Link object
Change superior location
Change reference location
Equipment
Usage periods

Change Functional Location

Classification Measuring point

Functional loc. PFBAME23-ACC

Description FUNCLOCATION

Status CRTE

General Location Organization Structure Sales and Distribution


InstallLoc: Install Equipment



Equipment

Functional loc. PFBAME23-ACC FUNCLOCATION

Pos.	Equipment	Sb-Eq	Info	EqInstDisD	EqInDiT...	Description
		☐		09.07.2020	06:26:20	
		☐		09.07.2020	06:26:20	
		☐		09.07.2020	06:26:20	
		☐		09.07.2020	06:26:20	
		☐		09.07.2020	06:26:20	

Vul het equipment nummer in


InstallLoc: Install Equipment



Equipment

Functional loc. PFBAME23-ACC FUNCLOCATION

Pos.	Equipment	Sb-Eq	Info	EqInstDisD	EqInDiT...	Description
	100320045	☒		09.07.2020	06:26:20	
		☐		09.07.2020	06:26:20	
		☐		09.07.2020	06:26:20	


Back 

Save 

Deel is ingebouwd

Indien een equipment uitgebouwd moet worden uit een ACC functional location

IL02

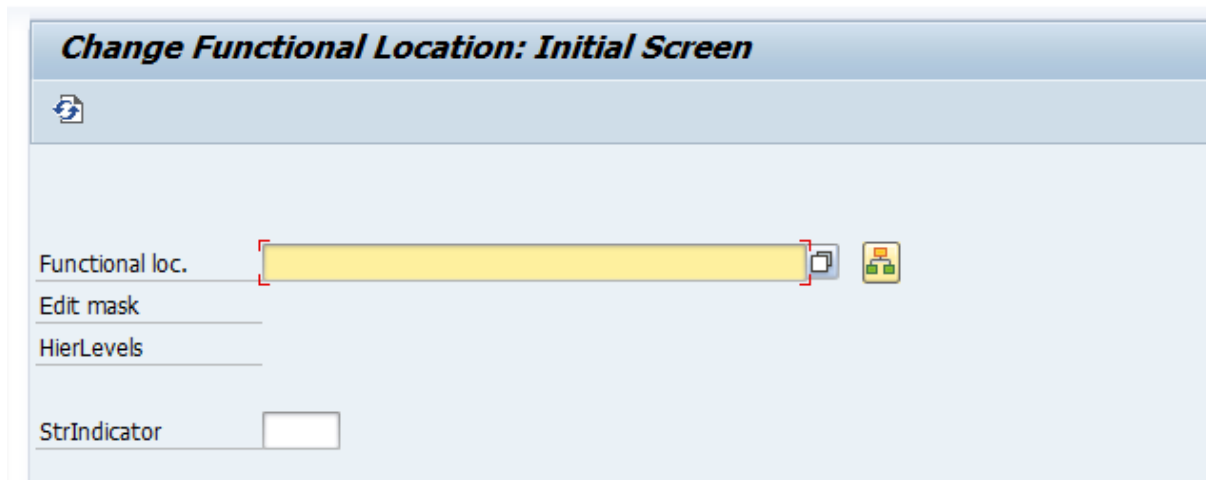

Change Functional Location: Initial Screen


Functional loc.

Edit mask

HierLevels

StrIndicator

Vul de functional location van de ACC in

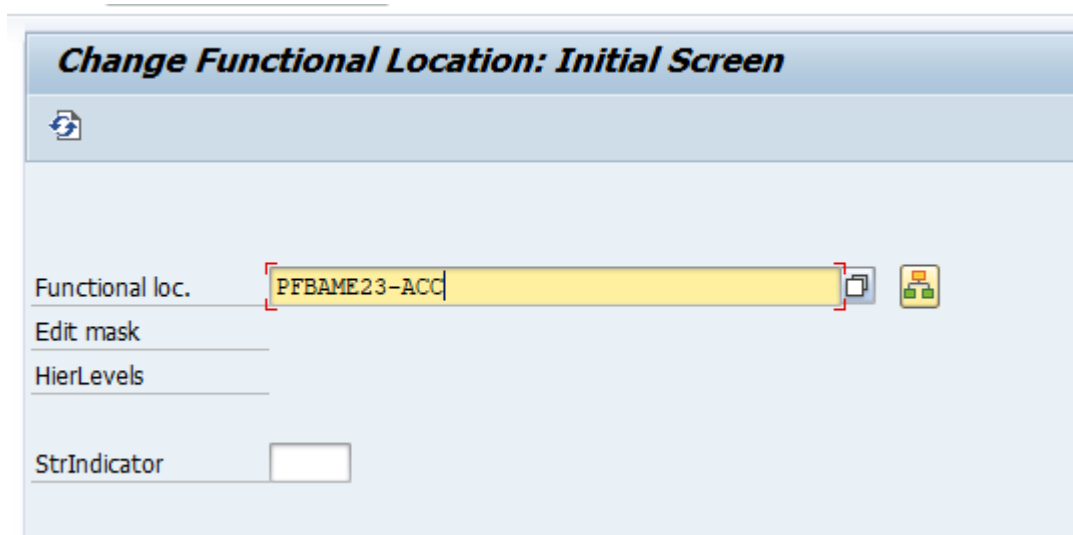

Change Functional Location: Initial Screen


Functional loc.

Edit mask

HierLevels

StrIndicator

Enter

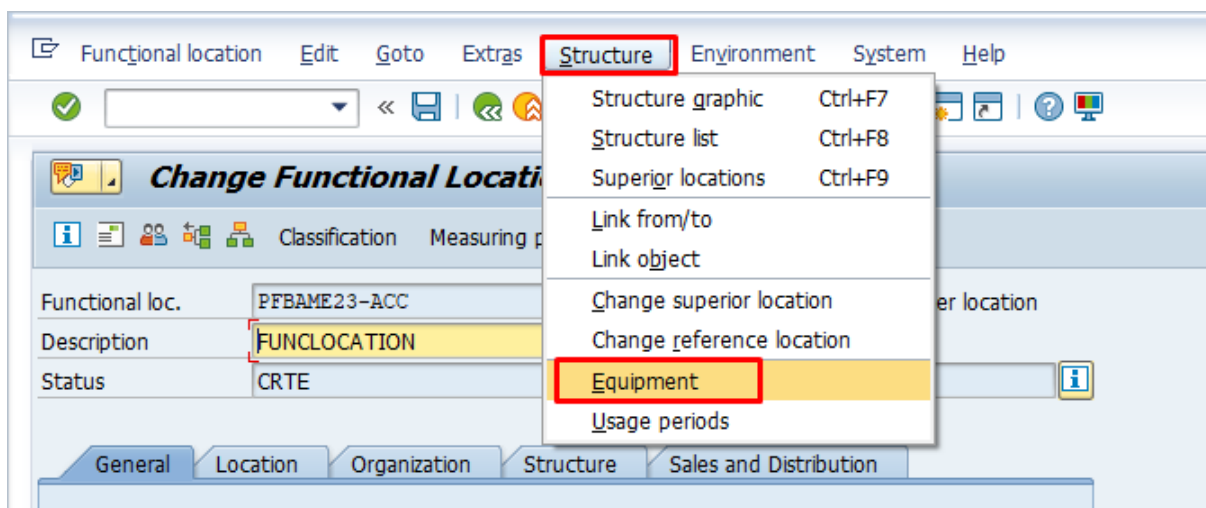

Functional location Edit Goto Extras **Structure** Environment System Help

Structure graphic Ctrl+F7
Structure list Ctrl+F8
Superior locations Ctrl+F9
Link from/to
Link object
Change superior location
Change reference location
Equipment
Usage periods

Change Functional Location

Classification Measuring point

Functional loc. PFBAME23-ACC
Description FUNCLOCATION
Status CRTE

General Location Organization Structure Sales and Distribution

InstallLoc.: Equipment Overview

Installation
 Dismantling
 Equipment
 Equipment

Functional loc. PFBAME23-ACC FUNCLOCATION

Pos.	Equipment	Sb-Eq	Info	EqInstDisD	EqInDiT...	Description
	100320045	☐		08.07.2020	13:45:44	VALVE-L.P.T. CLEAR

Selecteer de regel en druk op

Dismantling

InstallLoc.: Equipment Overview

Installation
 Dismantling
 Equipment
 Equipment

Functional loc. PFBAME23-ACC FUNCLOCATION

Pos.	Equipment	Sb-Eq	Info	EqInstDisD	EqInDiT...	Description
	100320045	☐		08.07.2020	13:45:44	VALVE-L.P.T. CLEAR

